 
 


Switches are intended to commutate warning lamp of the **break light** and engine control signal.

 
Series 21.3720



Application: VAZ, UAZ and GAZ cars

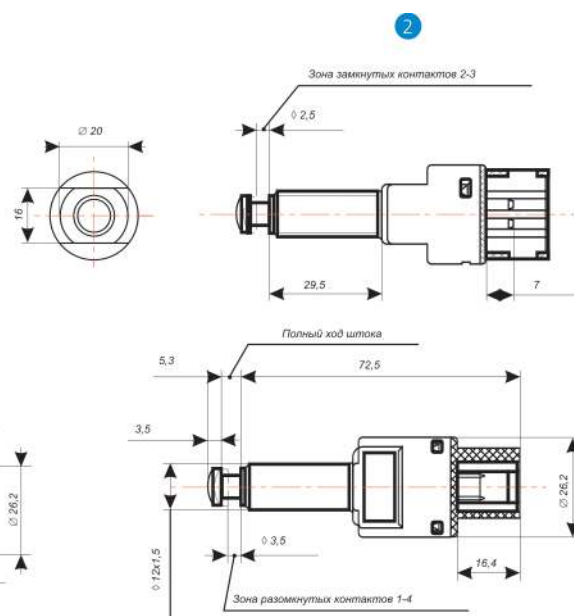

Электрическая схема/Electrical diagram

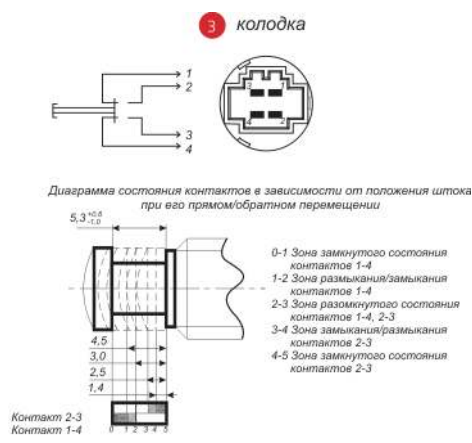41